



let us *guide you*

Your Interactive Program Guide (IPG) will help you get the most out of all CentraCom Digital Cable has to offer.

Using Your Remote

Using Your Cable Set-Top Box

Accessing Your IPG Menus

Mini Guide

Searching for Program Listings

Flip Bar

Favorites

DVR

Parental Controls

using your remote

TV

Press to enable control of your TV. (Note: This feature requires the digital remote to be programmed to operate your TV.)

LIST

Press to display a list of your recorded programs.

REPLAY

Press to jump back 15 seconds for an instant replay.

HELP

When using the Guide, press for helpful on-screen information.

EXIT

Press to exit the interface and return to current video program.

GUIDE

Press for a shortcut to TV listings organized by time.

OK

Press to select a highlighted item. Also shows or hides program information while watching TV.

SWAP

Use to watch two programs at once. See inside for more information.

POWER

Press to individually turn on or off the DVR, TV, or AUX component.

CABLE

Press to enable control of your digital cable / DVR box.

PAY-PER-VIEW

Press PPV to access the menu of available Pay-Per-View programming. (Not available in all areas.)

VIDEO CONTROL

In CABLE mode, these buttons pause, fast-forward, rewind and stop any DVR or PPV program selected. In the AUX mode, these buttons will control a VCR or DVD player, if programmed.

LIVE TV

Press to skip forward to live programming.

INFO

Press to see a description of the highlighted program, if available.

MENU

Press once to go to the Quick Menu or twice to go to the Main Menu.

ARROWS

Press to move the highlight to the next field in a menu or screen. Also use to browse what's on other channels while watching TV.



using your set-top box

Ventilation: Your set-top box is ventilated to protect it from overheating. To ensure its reliability, the openings should never ever be covered up. Never stack other AV equipment or place lights, books, magazines, etc. on top of the set-top box.

Also, never place magnets or magnetic/static dust removal devices on or near your set-top box.

Liquid or Moisture: Don't expose your set-top box to any liquid or moisture. If you need to clean your set-top box, unplug it from the electrical outlet and then use a damp cloth. Don't use liquid or aerosol cleaners, or any magnetic/static cleaning device.

If you have any questions or need additional advice when setting up your cable system, please refer to our Web site.

accessing your ipg menus

quick menu

- Press **MENU**  on your remote while in the guide or while watching a program to access the Quick Menu.
- Press the   buttons on the remote to move through the shortcuts.
- Press **OK**  to select the highlighted item.
- To exit the Quick Menu and return to watching TV, press **EXIT** 



quick menu icons key

- | | |
|--|---|
|  Main Menu |  Digital Recordings Menu |
|  Kids Search Menu |  Pay-Per-View Menu |
|  High Definition Menu |  Favorites List |
|  Search Menu |  Movies Search Menu |
|  Sports Search Menu |  Parental Controls |

main menu

- Press **MENU**  twice to access the Main Menu.
- To move the highlight, press the     buttons on the remote.
- Press **OK**  to select the highlighted item.
- To exit the Main Menu and return to watching TV, press **EXIT** 



mini guide

You can use the Mini Guide to browse what's on other channels without missing a minute of what you're watching.

- Press **OK** (OK) and then any of the **◀▶ ▲▼** buttons on your remote to browse by channel and time.
- The yellow highlight appears on the program listing, and the Mini Guide stays on screen, allowing you to see what's on other channels.



searching for program listings by time or channel

View start times, titles, ratings and descriptions. Listings are color coded to help you identify program types:

Blue: regular programs

Purple: movies

Green: sports

Light blue: children's programs

- Press **GUIDE** (GUIDE) on your remote.
- Select **Listings By Time** or **Listings By Channel** in the Main Menu.



by category

- Select **Q** in the Quick Menu or select **Search** in the Main Menu.
- View program listings by category such as **Movies** or **Sports**.
- Subcategories help you focus your search even further.
- Press **OK** (OK) to select the highlighted item.
- Press **EXIT** (EXIT) to return to the last channel you were viewing.



flip bar

The Flip Bar appears every time you change channels to make it easy to see what's on now. The current channel number, program name, rating and start and end times are conveniently displayed.

- Press **CHAN + -** to change channels and see the Flip Bar on screen.
- Press **OK** (OK) to make the Flip Bar disappear and reappear.
- Press **INFO** (INFO) for additional program details. Use the Action Icons at the bottom of the Program Information screen to set a Reminder and much more.



action icons key

- Return to previous screen
- Set or cancel recording
- Set or cancel reminder
- See all program air times
- Watch this channel/program
- Save channel in Favorites
- Place a lock on program

favorites

add or remove favorites

- Select in the Quick Menu or select **Favorites** in the Main Menu.
- As you scroll through the channels, press the **FAV** button to select or deselect favorites.
- Press **EXIT** (EXIT) to return to the last channel you were viewing, or press **LAST** (LAST) to return to the Main Menu.

access your favorites

- Press **FAV** while watching TV to change to your next favorite channel.
- Press **FAV** while looking through the channel listings to highlight your next favorite channel.



dvr

A Digital Video Recorder (DVR) offers you a whole new way to watch TV—by giving you the convenience and control to watch your favorite shows according to your schedule. Record your favorite show, pause live TV or create an instant replay.

record a program

You have three different ways to record a program:

- Press **RECORD**  while watching TV or viewing your TV listings. A menu will pop up with several recording options.
- Select  from the Action Icons.
- Manually schedule a recording by selecting **DVR** in the Quick Menu or **DVR** in the Main Menu.



watch a program

- Press **MY DVR** on your remote to access a list of your recorded programs.
- Highlight the program you want to watch using the **▲▼** buttons and press **OK** .
- Press  when you are ready to begin viewing the program.

Your DVR utilizes features similar to those found on your VCR or DVD player—just press Play, Stop, Pause, Rewind or Fast-Forward on your remote. Press **LIVE TV** to return to live TV.

parental controls

With the increased variety on digital cable, there's also some programs that, quite frankly, are not appropriate for children. But don't worry, we've included an integrated parental control feature as part of your system.

to set parental controls

- Select **Parental Controls** in the Quick Menu or **Parental Controls** in the Main Menu.
- Enter your 4-digit Locks PIN and follow prompts.
- Press **EXIT** (EXIT) to return to the last channel you were viewing, or press **LAST** (LAST) to return to the Main Menu to continue setting up your locks.
- Enter your 4-digit code, and follow the prompts on the Parental Control Menu. Use **◀▶** to select restrictions. You may restrict viewing by title, TV rating, movie rating, and channel. You may also choose to hide all Adult Titles by highlighting the Adult Titles option and press **HIDE** using the **▶** button.



to view a restricted program

Locks may be temporarily removed by re-entering the Parental Control Menu (using your 4-digit Locks PIN) and pressing buttons until the locked title, rating or channel appears. Press **LOCK**. The padlock will disappear, indicating that the restrictions have been removed.





1 (800) 427-8449 www.centracom.com